### Hardware Configuration - Configuring a Digital Sensor


- In Config Menu, Select "Digital Devices"
- Select Port Number and Name Sensor (no Whitespace)



Select sensor type and name it.

### Hardware Configuration - Configuring a Digital Sensor

- In Config Menu, Select "Digital Devices"
- Select Port Number and Name Sensor (no Whitespace)
- Hit "Done"

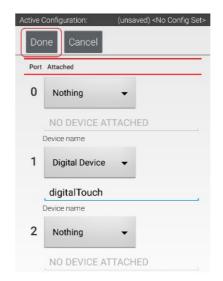





Hit "Done"

#### Hardware Configuration - Configuring an Analog Sensor


- In Config Menu, Select "Analog Input Devices"
- Select Port Number and Name Analog Sensor (no Whitespace)
- Hit "Done"

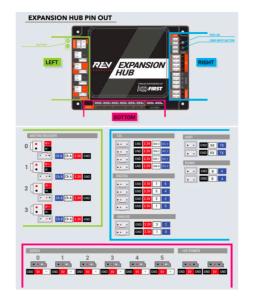

Configuring an Analog sensor is going to be exactly the same as a digital sensor, only you're going to choose Analog instead of Digital.

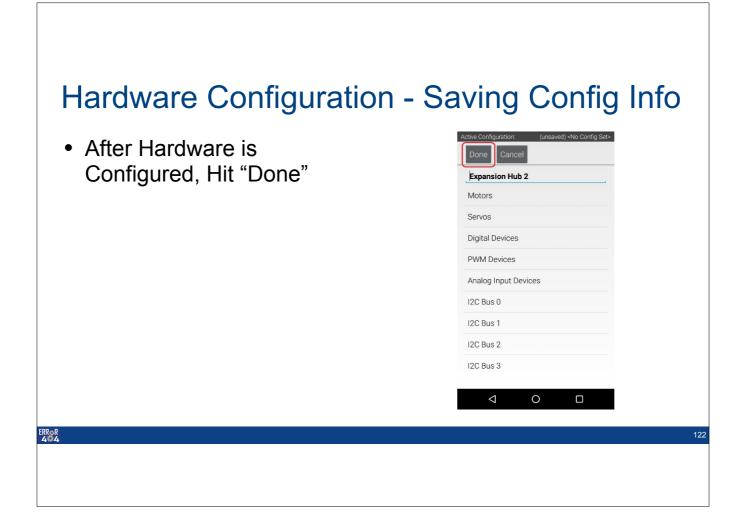

Once you have your hardware mapped in the config file, go ahead and save the config file. Hit "done"

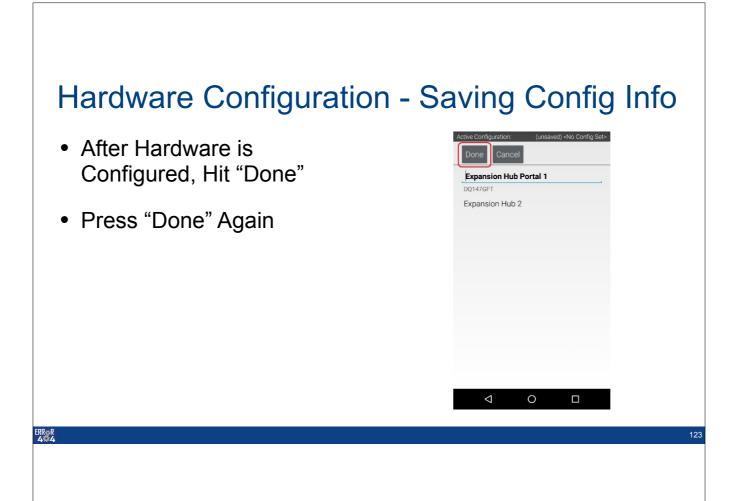

then hit it again...

# Hardware Configuration - Saving Config Info

- After Hardware is Configured, Hit "Done"
- Press "Done" Again
- Press "Save"



then hit save....

# Hardware Configuration - Saving Config Info

- After Hardware is Configured, Hit "Done"
- Press "Done" Again
- Press "Save"
- Name Config File and Hit "OK"





Name the config file


# Hardware Configuration - Saving Config Info

- After Hardware is Configured, Hit "Done"
- Press "Done" Again
- Press "Save"
- Name Config File and Save






and press "ok"

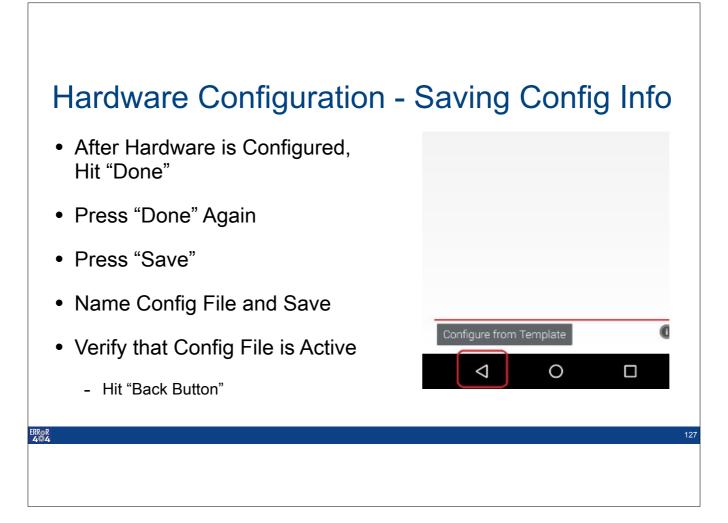

Now you need to verify that the phone is using your config file as the active one. Because you only have one right now, it should, but once you begin to have multiple config files, this will become much more important. To verify that the correct config file is active, hit the back button.

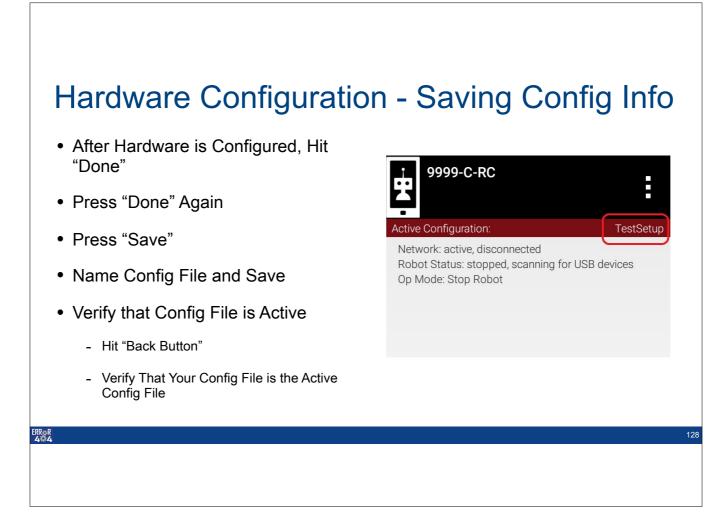

Then look as the red bar near the top. It says "Active Configuration" on the left and the name of the active config file on the right. If it is displaying your config file, then you are good to go.

Does anyone have any questions?